

10mm Aperture UV/VIS Fiber Optic Collimator, SMA



Fiber Optic Collimator, SMA (SMA adapter inserted)



Stock **#88-181** 2 In Stock

-

1

+

€424⁰⁰

ADD TO CART

Volume Pricing	
Qty 1-10	€424,00 each
Qty 11-24	€374,00 each
Qty 25-49	€354,00 each
Need More?	Request Quote

Prices shown are exclusive of VAT/local taxes

Product Downloads


General	
Fiber Collimator	Type:
0.22	Compatible Fiber NA:

Anodized Aluminum		Housing Material:
Compatible with #88-182 , #88-183 , #88-184 , #88-185 , #88-186 , & #88-187 Refocusing Assemblies		Note:
Physical & Mechanical Properties		
15.88	Diameter (mm):	
10.0	Aperture Size:	
34.29	Length (mm):	
Optical Properties		
Fused Silica (Corning 7980)	Substrate: ☐	
190 - 1250	Wavelength Range (nm):	
compatible 400 to 800	Fiber Diameter (μm):	
18.00	Focal Length FL (mm):	
Hardware & Interface Connectivity		
SMA	Connector:	
Environmental & Durability Factors		
-40 to 100	Operating Temperature (°C):	
Regulatory Compliance		
Compliant	RoHS 2015:	
Compliant	Reach 209:	
View	Certificate of Conformance:	


Product Details

- Can Be Coupled to Standard 0.22 NAFiber Optic Cables
- Options Available for UV-VIS or VIS-NIR
- Multiple Focal Length or Aperture Options


Focusable Collimators consist of two separate components: a fiber optic collimator and a fiber optic refocusing assembly. The fiber optic collimator utilizes a PCX lens positioned at the focal length from the optical fiber tip. These collimators are available with FC or SMA threads, and easily couple to standard 0.22 NA fiber optic cables. Focusable Collimators expand the beam and decrease the divergence by the ratio of the fiber core diameter to the collimator aperture. Fiber optic refocusing assemblies mount directly to the fiber optic collimator and allow for optimal focus at a given distance.

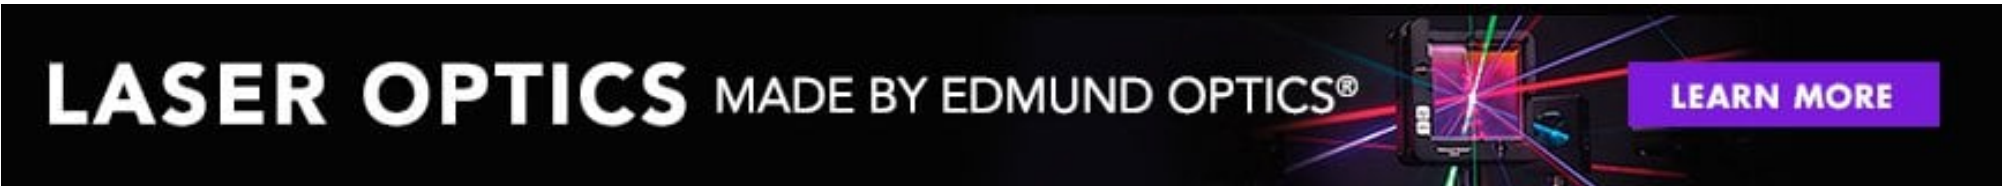

Technical Information

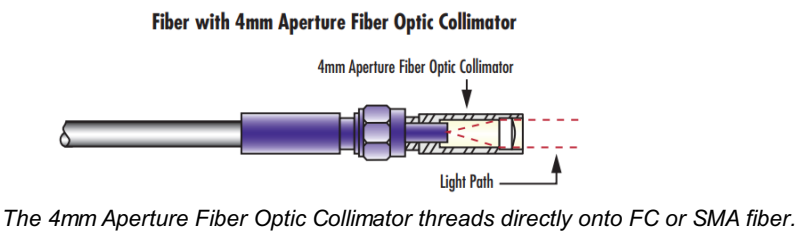


The 4mm Aperture Fiber Optic Collimator threads directly onto FC or SMA fiber.

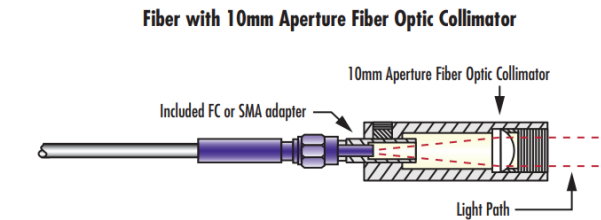

Each 10mm Aperture Fiber Optic Collimator includes an FC or SMA adapter that is inserted into the collimator and locked by a set screw.

Fiber with 10mm Aperture Fiber Optic Collimator and Refocusing Assembly

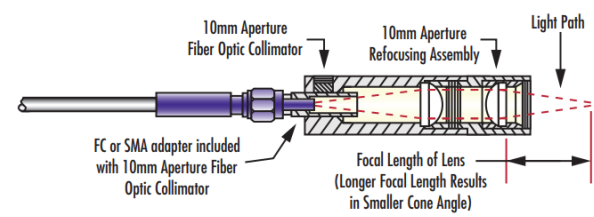

A 10mm Aperture Refocusing Assembly can then be directly threaded onto the 10mm Aperture Fiber Optic Collimator.

Collimator Description	Stock Number	Compatible Refocusing Assembly
4mm Aperture UV/MS Fiber Optic Collimator, FC	#88-189	No Compatible Refocusing Assemblies
4mm Aperture UV/MS Fiber Optic Collimator, SMA	#88-173	No Compatible Refocusing Assemblies
4mm Aperture VIS/NIR Fiber Optic Collimator, FC	#88-188	No Compatible Refocusing Assemblies
4mm Aperture VIS/NIR Fiber Optic Collimator, SMA	#88-172	No Compatible Refocusing Assemblies
10mm Aperture UV/MS Fiber Optic Collimator, FC	#88-191	#88-182, #88-183, #88-184, #88-185, #88-186, & #88-187
10mm Aperture UV/MS Fiber Optic Collimator, SMA	#88-181	#88-182, #88-183, #88-184, #88-185, #88-186, & #88-187
10mm Aperture VIS/NIR Fiber Optic Collimator, FC	#88-190	#88-182, #88-183, #88-184, #88-185, #88-186, & #88-187
10mm Aperture VIS/NIR Fiber Optic Collimator, SMA	#88-180	#88-182, #88-183, #88-184, #88-185, #88-186, & #88-187