

TECHSPEC[®] 12.5mm Dia x 2mm Thick, Barium Fluoride Window



Stock **#87-700** 15 In Stock

-

1

+

€188^{.00}

ADD TO CART

Volume Pricing	
Qty 1-10	€188,00 each
Qty 11-25	€168,00 each
Qty 26-49	€159,00 each
Need More?	Request Quote

Prices shown are exclusive of VAT/local taxes

Product Downloads

SPECIFICATIONS

General

Protective Window



Type:

Physical & Mechanical Properties	
Protective as needed	Bevel:
90.00	Clear Aperture (%):
11.25	Clear Aperture CA (mm):
12.50 +0.0/-0.1	Diameter (mm):
2.00 ±0.1	Thickness (mm):
Fine Ground	Edges:
82.00	Knoop Hardness (kg/mm²):
<3	Parallelism (arcmin):
0.34	Poisson's Ratio:
53	Young's Modulus (GPa):
Optical Properties	
81.78	Abbe Number (v _d):
Uncoated	Coating:
1.48	Index of Refraction (n _d):
Barium Fluoride (BaF ₂)	Substrate:
λ/2	Surface Flatness (P-V):
60-40	Surface Quality:
200 - 12000	Wavelength Range (nm):
Material Properties	
18.1	Coefficient of Thermal Expansion CTE (10 ⁻⁶ /°C):
4.89	Density (g/cm³):
Environmental & Durability Factors	
Maximum: 800	Operating Temperature (°C):
Regulatory Compliance	
Compliant	RoHS 2015:
Compliant	Reach 219:
View	Certificate of Conformance:

PRODUCT DETAILS

- Excellent Transmission from 200nm - 12µm
 - Resistant to High-Energy Radiation
 - Provide High Transmission without AR Coatings
- TECHSPEC® Barium Fluoride (BaF₂) Windows can be used in a variety of applications, such as infrared spectroscopy, due to their wide broadband transmission that extends from the deep ultraviolet to the long-wave infrared. Barium fluoride's low index of refraction of 1.48 provides high transmission without the need for anti-reflection coatings. Barium fluoride windows can be used up to 800°C in a dry environment, but prolonged exposure to moisture can degrade transmission in the ultraviolet range. While barium fluoride windows are less resistant to water than calcium fluoride, BaF₂ windows are the most resistant optical fluoride to high-energy radiation, but feature lower UV transmittance. BaF₂ has a Knoop hardness of 82.
- Note:** These optical windows are very sensitive to thermal shock.
- Barium fluoride is a fast scintillator and can be used to detect X-rays, gamma rays, or other high energy particles such as 511 keV gamma photons in Positron Emission Tomography (PET). BaF₂ can also be used to detect high-energy neutrons and separate them from simultaneously occurring gamma photons using pulse shape discrimination techniques.

TECHNICAL INFORMATION

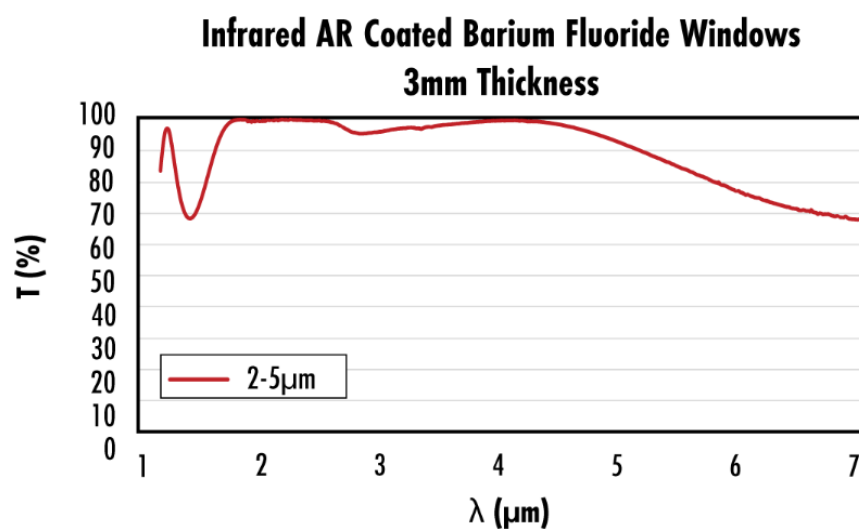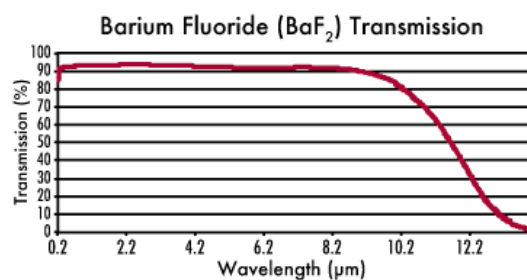

SPECIAL HANDLING

These optics require special handling to avoid damage and ensure long-term performance. Proper handling, cleaning, and storage are essential to maintain optical quality. Explore our [Optics Cleaning Resources](#) for step-by-step guides and best practices. For personalized assistance, [Email us](#) or [Chat](#) with our technical support team.



Component Handling Tools

COMPATIBLE MOUNTS