


TECHSPEC[®] 25.4mm Dia. x 76.2mm EFL, Enhanced Deep UV (DUV) 90° Off-Axis Mirror

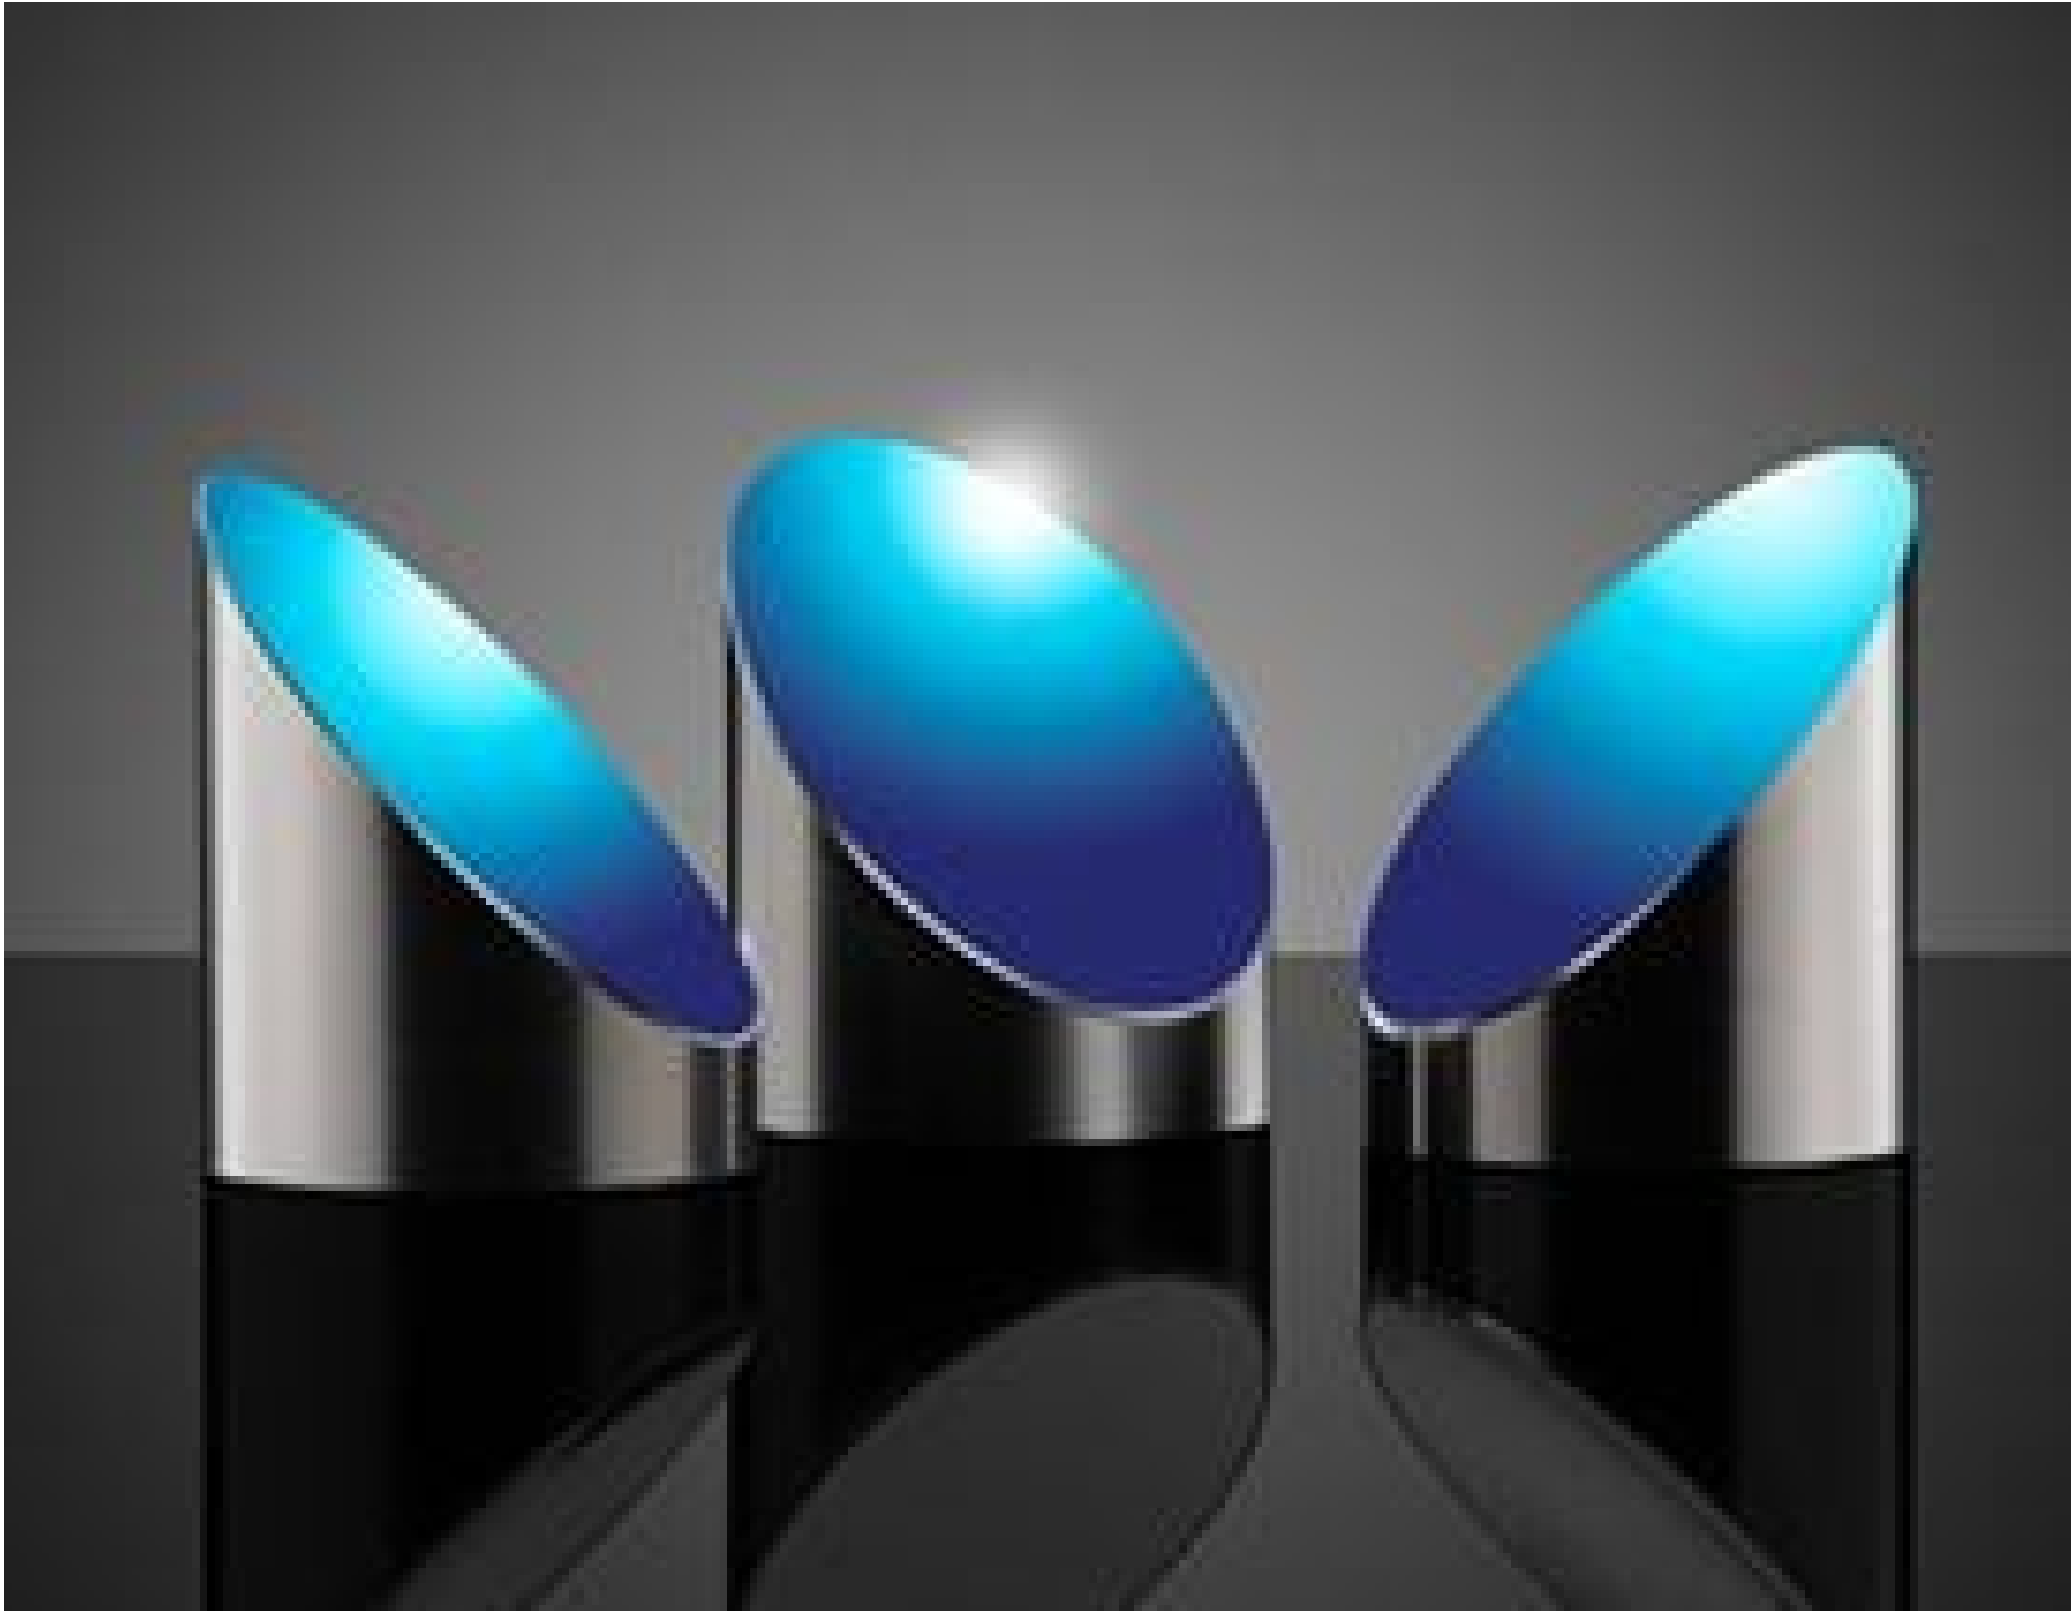

Ultraviolet Off-Axis Parabolic (OAP) Mirrors

Stock **#25-467** [CONTACT US](#)

-

1

+

€562⁰⁰

ADD TO CART

Volume Pricing	
Qty 1-5	€562,00 each
Qty 6-10	€450,00 each
Qty 11-25	€421,00 each
Need More?	Request Quote

Prices shown are exclusive of VAT/local taxes

Product Downloads

General	
Off-Axis Parabolic Mirror	Type:
Physical & Mechanical Properties	
25.40 +0.0/-0.1	Diameter (mm):
	Surface Roughness (□):

<50 RMS	
76.20	Y Offset (mm):
Optical Properties	
76.20	Effective Focal Length EFL (mm):
±1	Focal Length Tolerance (%):
76.20	Radius of Curvature (mm):
Enhanced Aluminum (190-900nm)	Coating:
Metal	Coating Type:
R _{avg} ≥92% @ 190 - 250nm R _{avg} ≥83% @ 250 - 900nm	Coating Specification:
90	Off-Set Angle (°):
38.1	Parent Focal Length PFL (mm):
λ/8	Surface Figure, RMS:
190 - 900	Wavelength Range (nm):
80-50	Surface Quality:
Aluminum 6061-T6	Substrate:
λ/4	Reflected Wavefront, RMS:

Threading & Mounting

#47-111	Compatible Mounting Plates:
---------	-----------------------------


Regulatory Compliance

Compliant	RoHS 2015:
View	Certificate of Conformance:
Compliant	REACH 241:

Product Details

- Enhanced Metallic Coating for High Reflectivity Across Deep UV (DUV) and Visible Spectra
 - 190nm Design Wavelength
 - <50ÅRMS Surface Roughness
- TECHSPEC® Ultraviolet Off-Axis Parabolic (OAP) Mirrors are coated with a DUV Enhanced Aluminum coating for excellent reflection from 190 – 900nm. To minimize scatter, these OAPs feature aluminum substrates and are diamond turned to have a surface roughness of <50ÅRMS. Standard imperial diameters are available with multiple focal length options which range from 25.4 – 203mm. TECHSPEC® Ultraviolet Off-Axis Parabolic Mirrors are ideal for use in DUV ellipsometers, DUV Raman spectroscopy, or for general focusing of UV light generated by broadband light sources. To facilitate mounting and system integration, threaded mounting plate [#47-111](#) (sold separately) which attaches to the base of these off-axis parabolic mirrors are available.
- Note:** The soft coating can be easily damaged by fingerprints and aerosols.

Technical Information

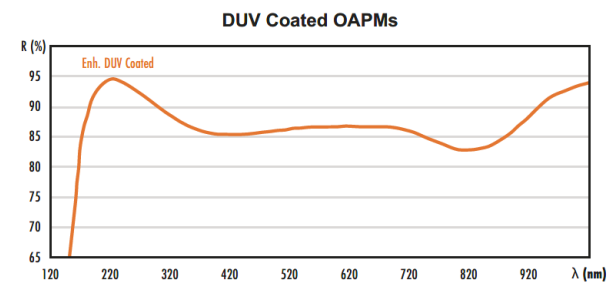

Special Handling

These optics require special handling to avoid damage and ensure long-term performance. Proper handling, cleaning, and storage are essential to maintain optical quality. Explore our [Optics Cleaning Resources](#) for step-by-step guides and best practices. For personalized assistance, [Email us](#) or [Chat](#) with our technical support team.



Component Handling Tools
