


## 50mm Diameter Narrow Elliptical Holographic Diffuser Kit



Holographic Diffusers



Stock **#56-056** [CONTACT US](#)

-

1

+

€849<sup>.75</sup>

ADD TO CART

| Volume Pricing |                               |
|----------------|-------------------------------|
| Qty 1+         | €849,75 each                  |
| Need More?     | <a href="#">Request Quote</a> |

**i** Prices shown are exclusive of VAT/local taxes

Product Downloads

### SPECIFICATIONS

General

4.00

Number of Diffusers:

|                                     |                             |
|-------------------------------------|-----------------------------|
| Holographic Diffuser                | Type:                       |
| Physical & Mechanical Properties    |                             |
| 50.00 ±0.1                          | Diameter (mm):              |
| Optical Properties                  |                             |
| 0.2 x 10, 0.2 x 40, 2 x 10, 10 x 20 | Diffusing Angle (°):        |
| Polycarbonate                       | Substrate: □                |
| 400 - 700                           | Wavelength Range (nm):      |
| Environmental & Durability Factors  |                             |
| -30 to +100 (Maximum of 240 Hours)  | Operating Temperature (°C): |
| Regulatory Compliance               |                             |
| Compliant                           | RoHS 2015:                  |
| View                                | Certificate of Conformance: |
| Compliant                           | Reach 247:                  |

## PRODUCT DETAILS


- Transmission Efficiency >85%
- Elliptical and Circular Diffusing Outputs
- Ideal for Visible and Near-Infrared Applications
- [UV Holographic Diffusers](#) Also Available

Holographic Diffusers are used to control the diffuse area of illumination and increase transmission efficiency to greater than 90% from filament lamps, LEDs, arc lamps, and other sources. [Standard ground glass](#) and [opal glass](#) will produce diffuse illumination, but the diffuse light area will often exceed the requirements of the system. This over-illumination, associated with traditional diffusers, reduces efficiency and can often lead to added costs by requiring higher power illumination sources, lenses, and possibly filters. It is important to note that diffusing angles are given for a collimated input beam and angular divergence will vary for different incidence angles.

Unlike many holographic elements, these specific polycarbonate components transmit light in both the visible and near-infrared. Zero order, or a specular component, of transmitted light is less than 1% for visible wavelengths, but may be higher if these diffusers are used at wavelengths >700nm. Available individually, as umounted sheets, or in sets of four filters. Holographic Diffusers can be cleaned with a de-ionized water rinse, followed by a forced air drying. Wipe gently with lens tissue soaked with methanol, followed with a forced clean air or nitrogen drying. Holographic Diffusers are resistant to methanol and methylene chloride.

**Note:** Matte surface should face the light source. To clean holographic diffusers, dampen a lint free cloth wipe with methanol and gently wipe the entire diffuser surface in a gentle, circular pattern. Immediately and carefully blow off the clean diffuser area with dry compressed air. Caution: cleaning may cause a change in the optical performance of the diffuser.

## TECHNICAL INFORMATION

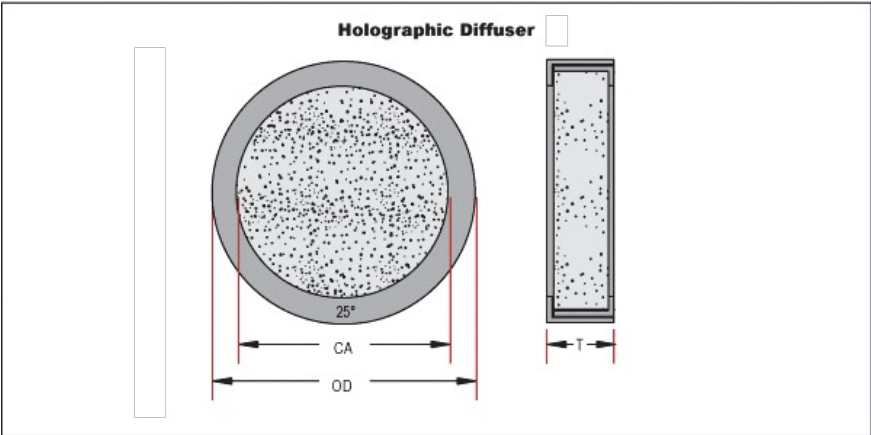

### Scattering Angle Profile

