



Light Blue Fluorescent Filter (ICF-050), 12.5mm Diameter

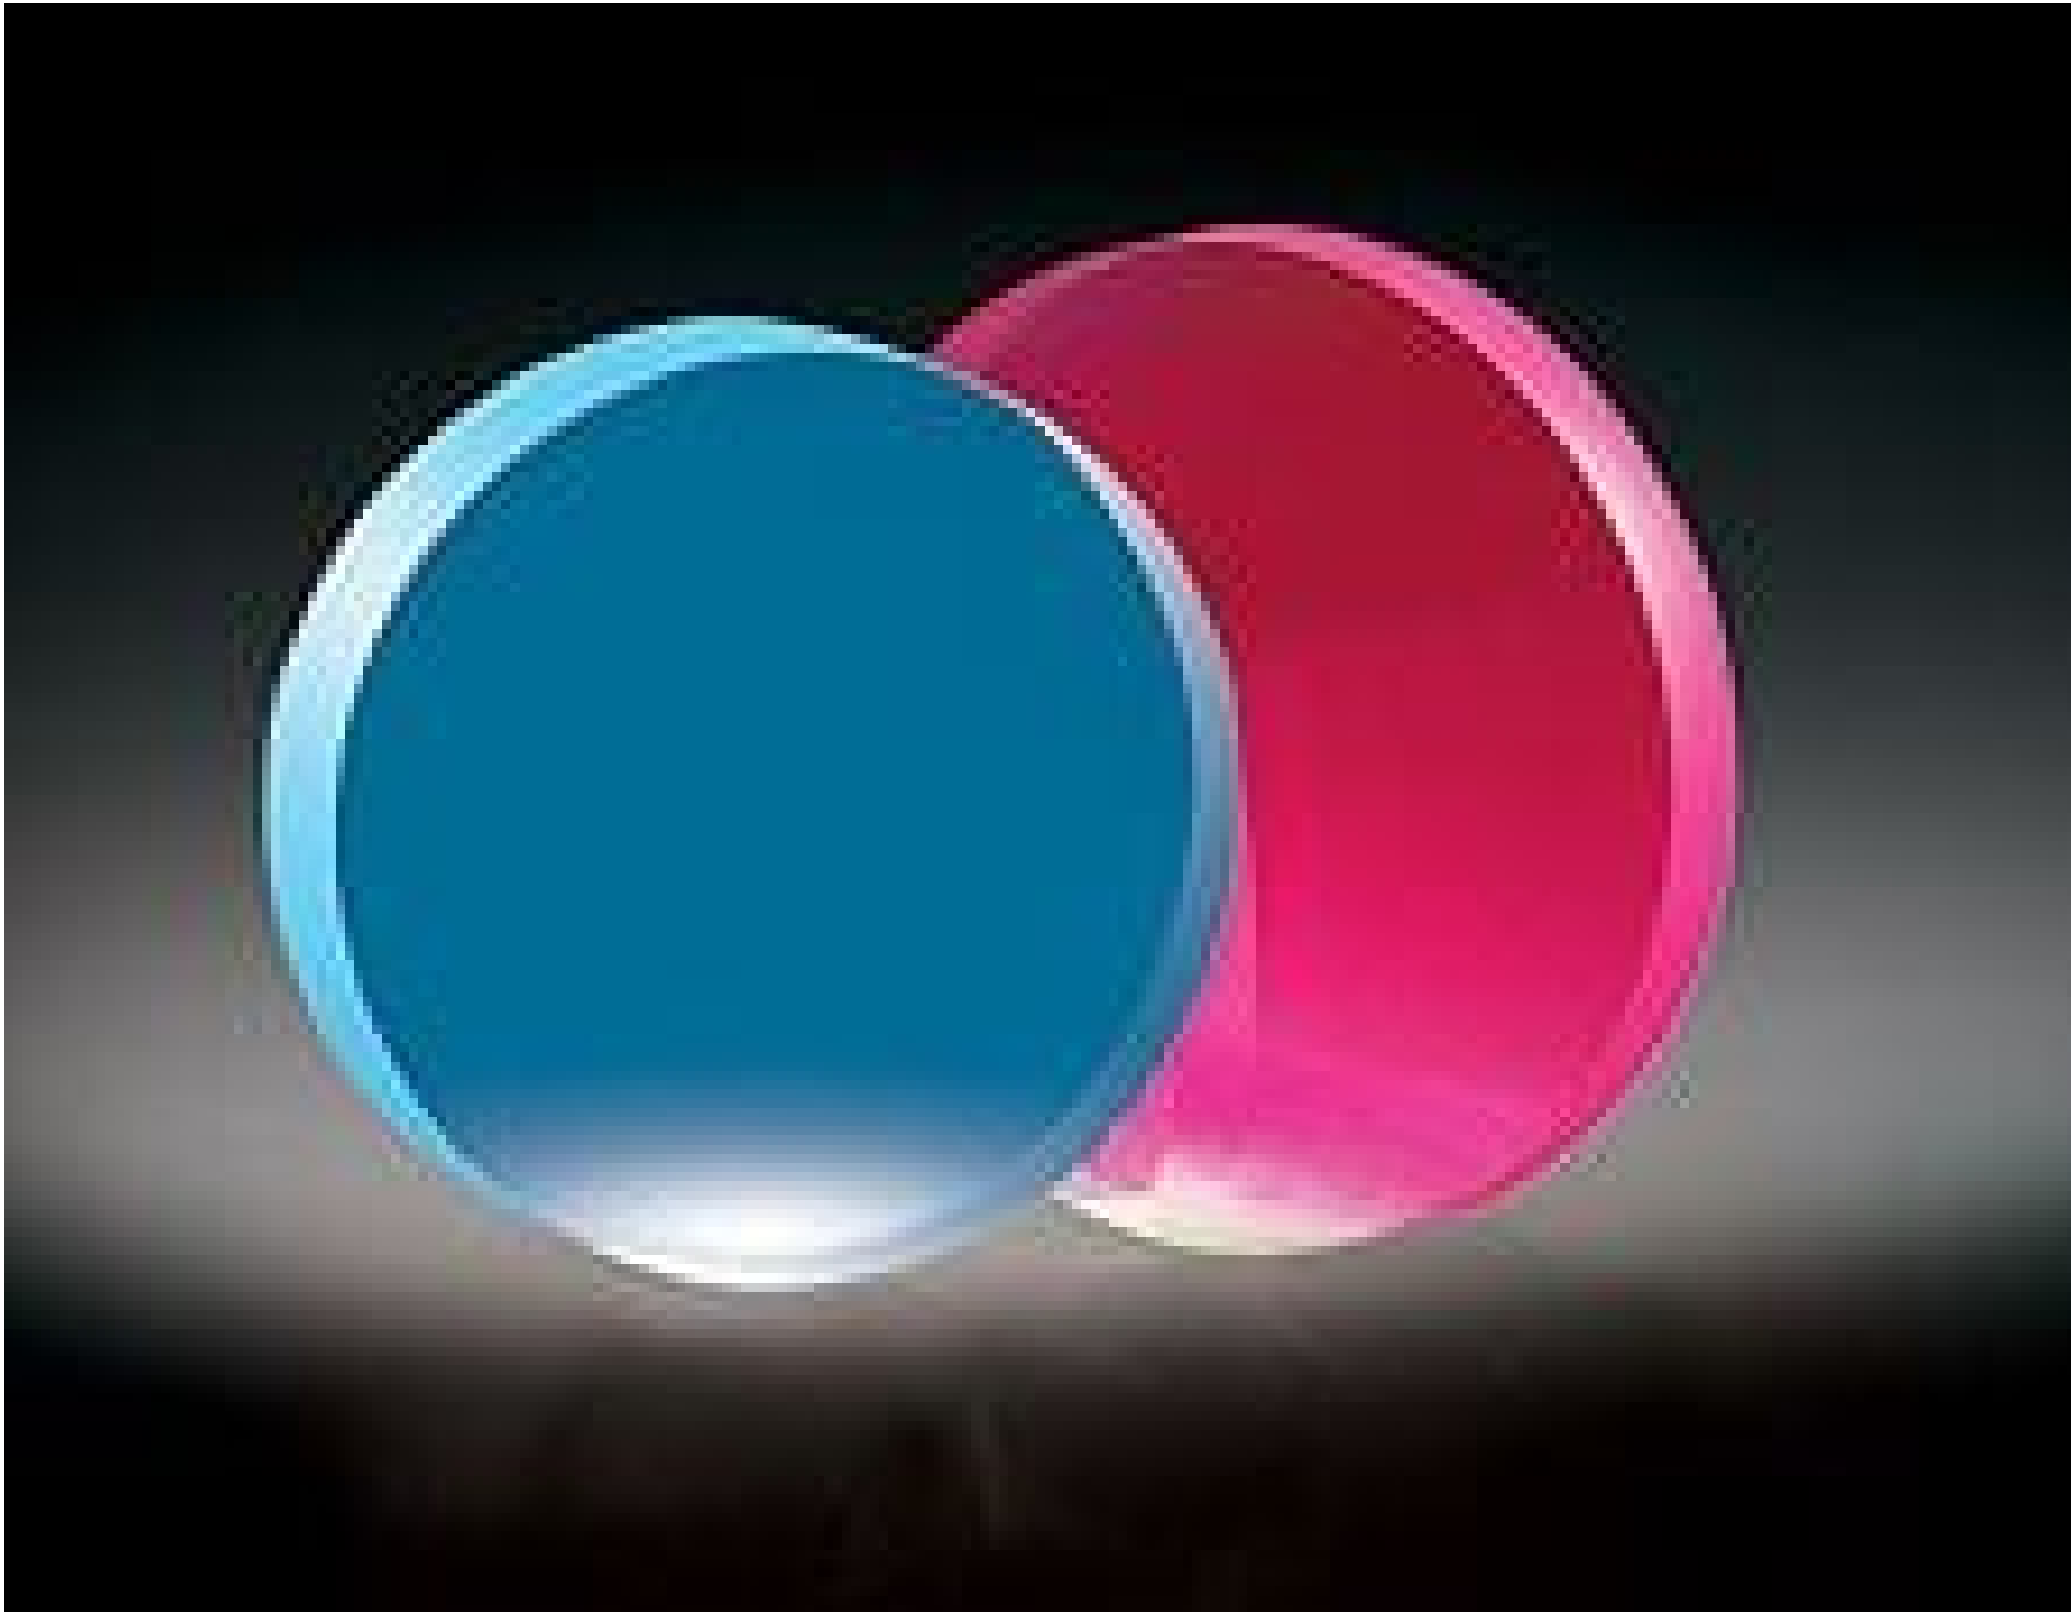

Stock #21-166 17 In Stock

-

1

+

€203⁰⁰

ADD TO CART

Volume Pricing	
Qty 1-9	€203,00 each
Qty 10-25	€179,00 each
Qty 26-49	€169,00 each
Need More?	Request Quote

⚠ Prices shown are exclusive of VAT/local taxes

Product Downloads

SPECIFICATIONS

General

Color Filter	Type:
Physical & Mechanical Properties	
12.50 ±0.25	Diameter (mm):
3.00 ±0.10	Thickness (mm):
Optical Properties	
Isuzu ICF-050	Glass/Filter Number:
Fluorescent Glass	Substrate: ☐
Uncoated	Coating:
Light Blue	Color:
1.538	Index of Refraction (n _d):
440	Peak Emission Wavelength (nm):
200 - 400	Excitation Wavelength (nm):
365.00	Peak Excitation Wavelength (nm):
Performance	
~1μW/cm ²	Minimum Sensitivity:
Material Properties	
490.4	Transformation Temperature (°C):
9.16	Coefficient of Thermal Expansion CTE (10 ⁻⁶ /°C):
Regulatory Compliance	
Compliant	RoHS 2015:
View	Certificate of Conformance:
Compliant	Reach 235:


PRODUCT DETAILS

- Excite with UV Illumination
- Wide Range of Fluorescence Colors
- High Sensitivity and Durability

Fluorescent Glass Filters absorb UV energy (peak absorption at 365nm) and re-emit light into the visible spectrum. Appearing colorless when not exposed to UV light, these filters are available with red, orange, yellow, green, blue, and purple emission colors. Sensitivity as low as ~1μW/cm2 allows for these filters to transform faint UV sources to detectable visible light. Fluorescent Glass Filters are ideal for use in fluorescence microscopy, excimer laser detection and characterization, and as a standard test material for fluorescence characteristics

These fluorescent glass filters are ideal for blocking excitation light while efficiently transmitting emission wavelengths in fluorescence imaging and spectroscopy. Manufactured from high-quality colored glass, they offer sharp spectral cutoffs and strong out-of-band blocking without the need for complex coating stacks. These durable glass filters are well-suited for use in research microscopes, fluorescence systems, and other light-sensitive optical setups requiring consistent and stable spectral performance.

TECHNICAL INFORMATION

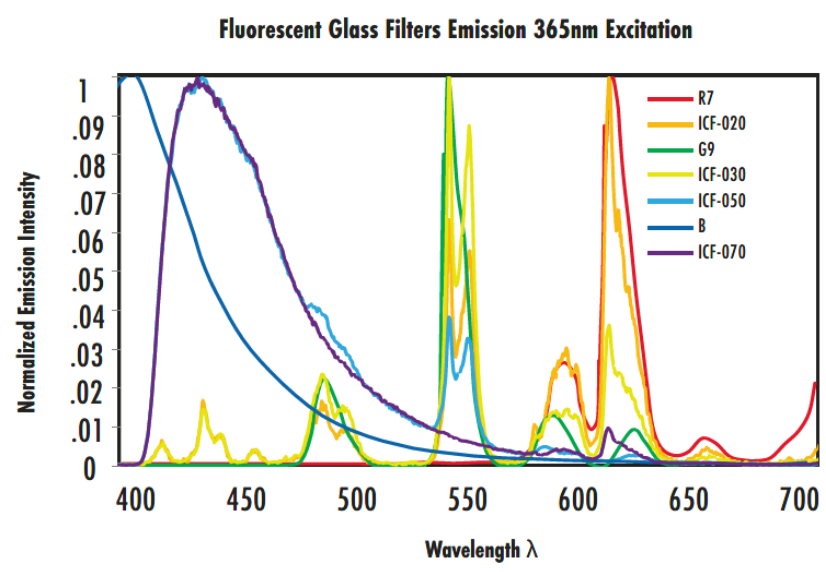

COMPATIBLE MOUNTS